

CEW FUNCTION TESTING STATION

READ ALL WARNINGS BEFORE USE

 **NO FIREARMS- CEW TESTING ONLY** 

STEP 1

Place the CEW into the opening of the testing chamber. Arm the unit.

STEP 2

Conduct the function test.

STEP 3

Observe the CEW arcing properly across the cartridge bay(s) in the mirror of the testing chamber

STEP 4


Confirm CID for any error messages and power is >20%.

STEP 5

Make the CEW safe. Remove it from the testing chamber.



CID MESSAGES

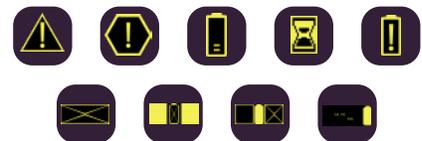

LABORATOIRE D'ESSAIS FONCTIONNELS DU CEW

LISEZ TOUS LES ADVERTISSEMENTS AVANT D'UTILISER CET APPAREIL



**AUCUNE ARME À FEU- ESSAIS
D'ARMES A IMPULSIONS SEULEMENT**



ÉTAPE 1

Mettre l'arme à impulsions dans l'ouverture du caisson d'essai et armer l'appareil.

ÉTAPE 2

Procéder à une vérification du fonctionnement.

ÉTAPE 3

Observer si l'arme à impulsions décrit un arc électrique approprié à l'aide du miroir interne de la caisse à impulsions.



ÉTAPE 4

Consulter l'écran central d'affichage d'information pour voir s'il y a des messages d'erreur et si l'alimentation est à moins de 20%.

ÉTAPE 5

Rendre l'arme à impulsions sécuritaire et la retirer du caisson d'essai.

MESSAGES DE L'ÉCRAN CENTRAL D'AFFICHAGE D'INFORMATION

